

# INSTALLATION

## INSTRUCTIONS


### STEP 1: Preparation

Assure the surface is free of dust, debris, clean and dry. Remove all protruding objects like nails, repair all defects and fill holes, gaps and cracks to create a smooth even-leveled surface. Failure to remove debris could potentially scratch or mar the surface. When protecting curing concrete, finishes, or adhesives, ensure the surface is cured enough to walk on without damaging or is strong enough to adequately support the weight of the intended traffic before laying down BTO Temporary floor protection.



### STEP 2: First BTO Temporary Floor Protection lay down

Roll-out temporary floor protection over the surface with logo printing side facing up towards the ceiling. This allows the product to lay out and install quickly. Simply lay roll on the ground, roll out to desired length, and cut. To cut, roll BTO Temporary floor protection away from floor or surface, cut and lay back into place.

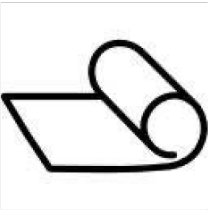

### STEP 3: Sealing together with BTO Breath Tape

Use BTO Breath Tape continuously along all seams. Line up or overlap BTO Temporary floor protection's sides together and tape. As with any adhesive, consult the contractors before taping directly to any surface. BTO breath tape is specialized to use together with BTO Temporary floor protection and it is 100% recyclable.



For any questions about installation and use problems  
Contact us at 0769-88880226 or email to [technical@btoholding.com](mailto:technical@btoholding.com)  
BTO Temporary floor protection is manufactured in China.